

- When in doubt, call Summit Automation at 480-500-5468 and we will assist you over the phone/facetime as needed.
- Feel free to look at our Website for step by step instructional videos as well.
  - <https://www.summitautomation.com/homeowner-videos>
  - **\*The Soft and Hard Reset features from the keypad do not apply to the 90 degree door application. Please contact us at 480.500.5468 to walk through the reset process for the 90 degree application.\***

- **Self-Close Feature**

- Press & hold stop and unlock on the wall switch at the same time until lights are rapidly flashing
- Press open on the wall switch
- Feature should be programmed at this point (to remove the feature, follow the same process)

- **Auto-Open Feature**

- Press & hold open and unlock on the wall switch at the same time until lights are rapidly flashing
- Press open on the wall switch
- Feature should be programmed at this point (to remove the feature, follow the same process)

- **Thinline Exterior Keypad (Changing Passcode)**

- Input Factory Code 123#
- Input \*3123# (you should see a red flashing light)
- Input 1# to set new passcode
- Enter in your new passcode then press #
- Enter \* twice to confirm new passcode
- Now new passcode should be active
- Enter new passcode followed by # and door should open

- **Soft Reset From Keypad**

- Press the unlock button
- Manually close the door
- Press & hold stop for 10 seconds until lights are rapidly flashing
- Within 5 seconds of lights rapidly flashing press close
- Your doors are now Reset

- **Hard Reset From Keypad**

- Press the unlock button
- Place the lead panel in the center of the opening
- Press & hold unlock for 10 seconds until the lights are rapidly flashing
- Within 5 seconds of the lights rapidly flashing, Press open and close at the same time (when released the lights will slowly flash)
- Press open on the wall switch (If the lead panel opens, press unlock. If the lead panel closes, press open, and the panel will reverse into the open direction. Then press unlock)
- Manually push all the panels fully into the pocket or fixed panel (open position)
- Press & hold unlock on the wall switch for about 5 seconds until the lights are rapidly flashing. Release the button
- Manually pull all the panels back into the closed position
- Press & hold unlock on the wall switch for about 5 seconds until the lights are rapidly flashing, Release the button
- Your doors will now open and close themselves to calibrate ( they are reset at this point)



- **Wired/Wireless Exterior Keypad (Changing Passcode)**

- Press Open
- Solid blue light and flashing red light will appear
- At this time, input factory code (1234)
- Once code is entered, red and blue lights will flash
- As lights flash, hold down 1 & 2 (at the same time) for about 15 seconds (rapid red light should be flashing during this time)
- Once lights slow down, enter in new passcode twice in a row
- Blue and red lights will then both flash to register the new code and then disappear when the code is saved
- Now new passcode should be active

- **Soft Reset From Touchscreen**

- Press the unlock button
- Manually close the door
- Scroll Over to the Features page
- Press & hold System Reset (for about 10 seconds or until bubble highlights in green)
- Your doors are now Reset

- **Hard Reset From Touchscreen**

- Scroll over to the Features Page
- Press & hold down the Summit S logo until it says "Programmed" on the top of the screen
- Your memory is completely wiped at this point and the door is ready for the programming steps listed below
- Press the unlock button
- Place the lead panel in the center of the opening
- Press & hold unlock for 10 seconds until you see it say "Programmed" at the top of the screen
- Press open on the touchscreen (If the lead panel opens, press unlock. If the lead panel closes, press open, and the panel will reverse into the open direction. Then press unlock)
- Manually push all the panels fully into the pocket or fixed panel (open position)
- Press & hold unlock on the touchscreen for about 5 seconds until you see it say "Programmed" at the top of the screen. Release the button
- Manually pull all the panels back into the closed position
- Press & hold unlock on the touchscreen for about 5 seconds until you see it say "Programmed" at the top of the screen. Release the button
- Your doors will now open and close themselves to calibrate ( they are reset at this point)